

User Manual

Electronic Code SECURAM FINGERPRINT



SECURAM

ScanLogic Basic FPC-1808-II (UL)



Programming ScanLogic Basic

After installing new battery, please press "+" button and one beep sounds, to have the keypad and lock body synchronized.

- A. Open lock
 - 1) Enter default Manager code 123456
 - B. Change Code
 - 1) Enter 000000
 - 2) Enter existing code, 1 beep
 - 3) Enter new 6 digit code, 1 beep
 - 4) Repeat new 6 digit code, 2 beeps

**Manager code of 123456 must be changed before any other Users can be added*

***Reset Code must be changed from default*

****1 long beep means code is not allowed*
 - C. Add Manager fingerprint(s)
 - 1) Open with Manager code/fingerprint
 - 2) Hold "+," and hold until 1 beep
 - 3) Place fingerprint 4X, 1 beep each
 - 4) 2 beeps confirms fingerprint addition

**Manager can add up to 5 fingerprints*
 - D. Add User1 Code
 - 1) Open with Manager code/fingerprint
 - 2) Hold "1," 1 beep
 - 3) Enter new 6 digit code, 1 beep
 - 4) Repeat new 6 digit code, 2 beeps
 - E. Add User2 Code
 - 1) Open with User1 code/fingerprint
 - 2) Hold "1," 1 beep
 - 3) Enter new 6 digit code, 1 beep
 - 4) Repeat new 6 digit code, 2 beeps
 - F. Add fingerprints
 - 5) Open with own code/fingerprint
 - 6) Hold "+," 1 beep
 - 7) Place fingerprint 4X, 1 beep each
 - 8) 2 beeps confirms fingerprint addition

**User1 and User2 can add up to 5 fingerprints*
 - G. Delete own fingerprints (All)
 - 1) Open with your own code/fingerprint
 - 2) Hold "-", 2 beeps

**All of your fingerprints have been deleted*
 - H. Delete User2 (Code & fingerprints)
 - 1) Open with User1 code/fingerprint
 - 2) Hold "3", 2 beeps

**User2 code and fingerprints are deleted*
 - I. Delete All (Codes/fingerprints)
 - 1) Open with manager code/fingerprint
 - 2) Hold "3", 2 beeps

**Manager code remains unchanged, User1 and User2 are deleted*
 - J. Reset (resets codes to factory default)
 - 1) Input reset code, In Black Envelope
 - 2) Hold "6", 2 beeps

**Lock is in default mode, Manager code reverts to 123456, Reset code remains unchanged*
 - K. Turn beeper off
 - 1) Open with Manager or User1 code/fingerprint
 - 2) Hold "4," 1 beep
 - L. Turn beeper on
 - 1) Open with Manager or User1 code/fingerprint
 - 2) Hold "4," 2 beeps
- Security Levels:**
- Security Level 1 = Fingerprint or code
- Security Level 2 = Fingerprint **and** code
- M. Change to Security Level 2 (fingerprint **and** code)
 - 1) Open with Manager or User1 code/fingerprint
 - 2) Hold "5," 1 beep, then 2 beeps
 - N. Change to Security Level 1 (fingerprint **or** code)
 - 1) Open with Manager or User1 code **and** fingerprint
 - 2) Hold "5," 1 beep, then 1 beep

SECURAM

ScanLogic Basic FPC-1808-II (UL)

Penalty Time

- 1) The entry of 5 incorrect codes will cause the lock to enter Penalty Time where the lock is lock down for a period of 5 minutes. You cannot open the lock during the penalty time period.
- 2) During the Penalty Time, the keypad will beep every 5 seconds and the buttons on the keypad are not operable. Entering additional codes during penalty time does not extend penalty time.
- 3) Two beeps indicates penalty time has expired and the beeping will stop, enter a valid code to open the safe lock.
- 4) Note: If after penalty expires you enter an invalid code two more times, the lock will go back into penalty time.

Troubleshooting

- 1) Lock beeps 10 times after fingerprint/code entry: This is the low battery indicator. Replace the battery with a new Duracell or Energizer battery.
- 2) Green lights after input of fingerprint or code – this is an indication of a valid fingerprint or code entry
- 3) Red lights after input of fingerprint or code – this is an indication of an invalid fingerprint or code entry

Replace the battery

One 9V alkaline battery is installed in the pull-out compartment in the bottom of the input unit. To replace the battery, pull out the battery compartment first. Follow these steps:

- 1) Release the latch of the battery compartment until it comes to the end. (See Fig. 2)

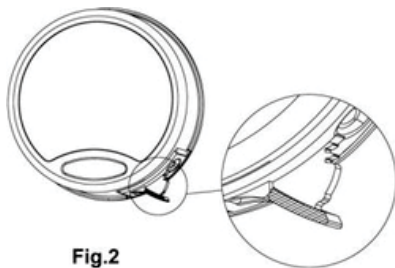


Fig.2

- 2) Release the latch of the battery compartment until it comes to the end. (See Fig. 2)



Fig.3

- 3) Take out the battery and replace with a new one. Make sure to connect the new battery correctly for positive (+) and negative (-) poles. (See Fig. 4)

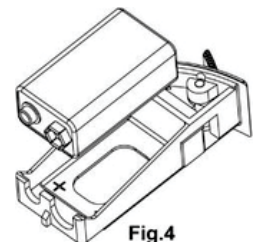


Fig.4

- 4) Put the battery compartment back into the input unit. Push it up until it is in line with the cover. Press down the latch of the battery compartment until it is tight and secure. (See Fig. 1)

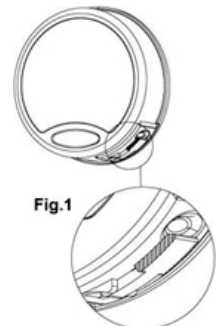


Fig.1

After installing new battery, please press "+" button and one beep sounds, to have the keypad and lock body synchronized.